

- Full GNSS Band Repeater Kit
 - GNSSRK-M-RDV
 - GNSSRK-M-RDV4
 - GNSSRK-M-RDV8
- Installation and User Guide



WWW.GEMSNAV.COM

Contents

1. System characteristics.....	3
2. Installation diagram.....	4
3. Description	6
4. Typical Application.....	6
5. Equipment List With Standard Configuration	6
6. System connection diagram	8
7. System Components.....	11
7.1 Digital Display Step Adjustable Amplifier RGA30-DV	11
7.1.1 Function:.....	11
7.1.2 Specification	12
7.1.3 The amplifier Installation.....	12
7.2 Antenna.....	14
7.2.1 Roof Antenna S440.....	14
7.2.2 GNSS antenna S440 installation	15
7.3 Re-radiate Antenna GRA10	17
7.4 Cable Assembly	18
7.4.1 RG8	18
7.4.2 XHY240	19
8 Typical faults and solutions.....	20
9 Frequency Reference Table.....	20


1. System characteristics

GNSSRK Serial Repeater Kit

- ✧ System signal: GPS/GLONASS/Beidou/Galileo/IRNSS/QZSS/SBAS/NAVIC/OmniStar
- ✧ Frequency range of the antenna:1556~1623MHz and 1164~1288 MHz;
- ✧ Frequency range of the amplifier:1164~1616 MHz;
- ✧ Gain digital display adjustable in steps
- ✧ Digital gain adjustment: 0-30dB, LED digital display;
- ✧ Serial command control;
- ✧ Input and output port power setting;
- ✧ Coverage Range:
 - ✧ GNSSRK-M-RDV: A single antenna radiates a radius of 5-20 meters;
 - ✧ GNSSRK-M-RDV4: 4 antennas, each radiating 5-20 meters ;
 - ✧ GNSSRK-M-RDV8: 8 antennas, each radiating 5-20 meters;
- ✧ The addition of the line amplifier GA40 to the front and end of the system can extend the radiation range.

2. Installation diagram

Satellite signals

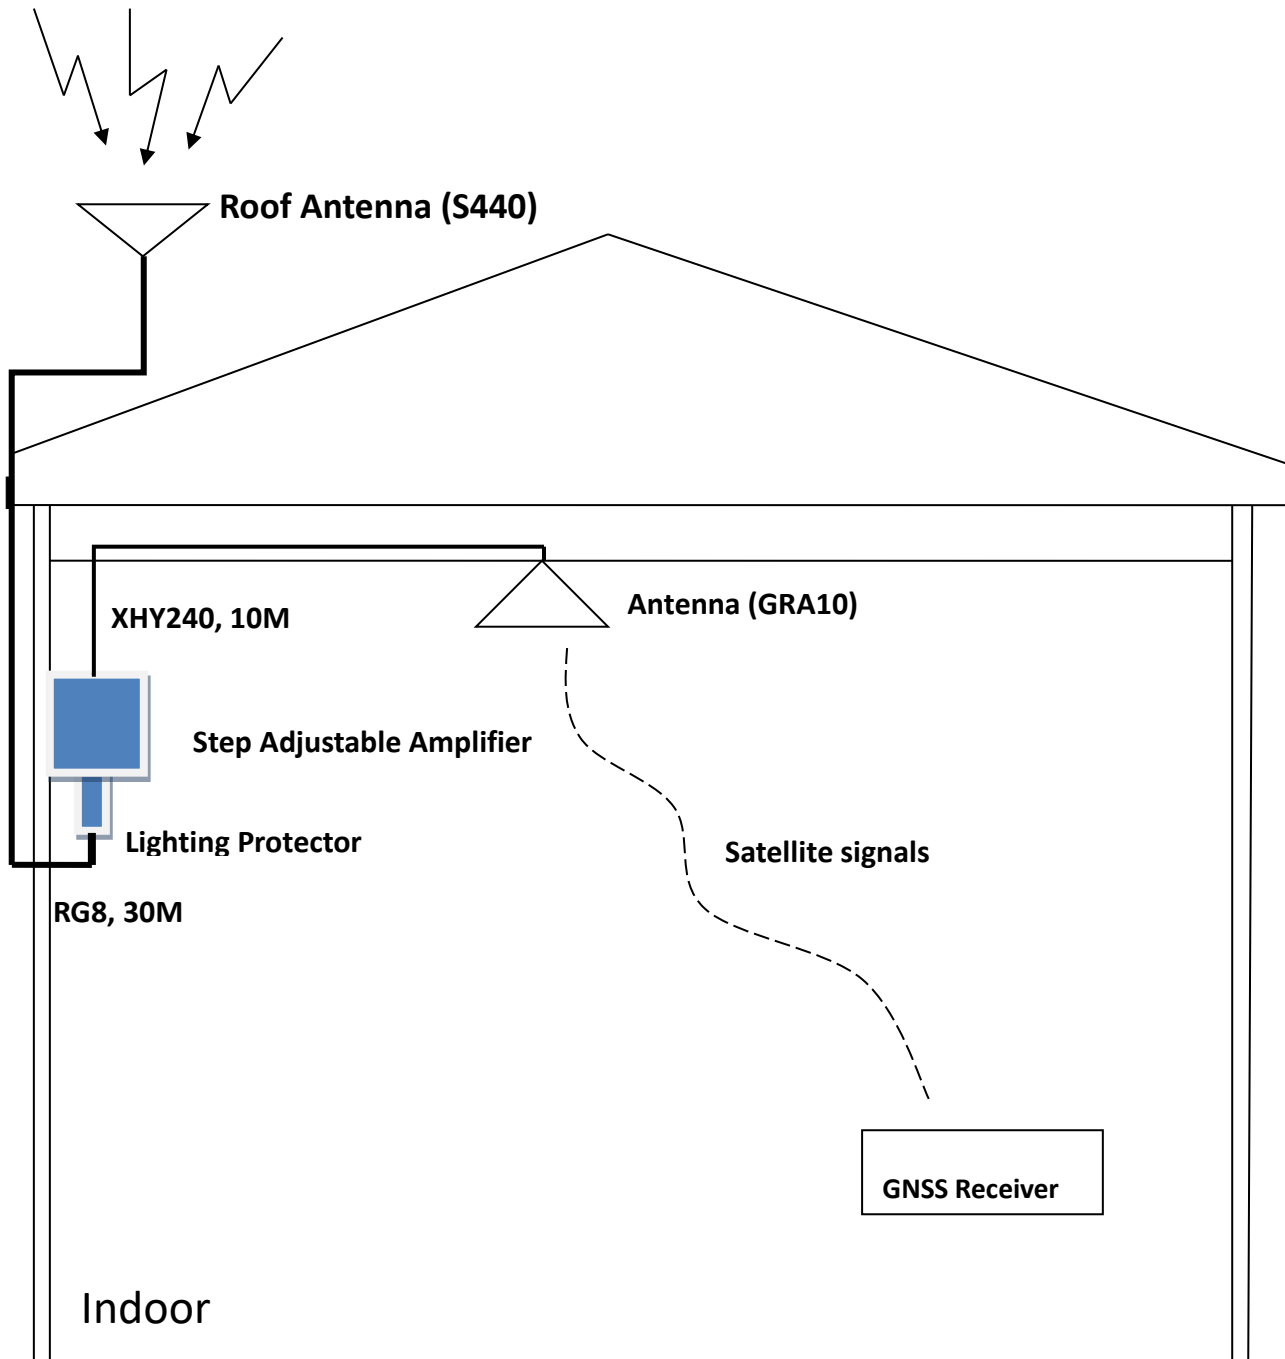

Installation steps

1. Receiving antenna S440 mounted on the roof;
2. Cable assembly RG8 fixed along the out wall, one terminator connects S440, the another to protector at the appropriate place. In some special environment, select PE or PVC material plastic pipe to protect the cable assembly is quite sensible;
3. Lightning arrester and amplifier fixed on the wall or on the table ;
4. Cable assembly XHY240 is fixed along the ceiling of the operating place;
5. Antenna GRA10 be fixed on the ceiling .

Quality Commitment

All products have been strictly inspected, all are qualified products.

We promise one-year guaranty and 5-year available.

Under warranty, products gone wrong which be identified not be human factor, can be replaced free or repaired. Freight be charged by GEMS NAVIGATION.

Return Policy

Our product and its packaging have LOGO and Serial-number, you should not tear up them, as we will depend on them to deal with the return product.

Service phone: 86-755-29644311 or email to: sales@gemsnav.com.

3. Description

The GNSSRK-M-XXXX series GNSS repeater kit is to direct outdoor full-band navigation satellite signals to places where indoor or other satellite signals cannot reach, and complete various test work that should have been completed outdoors indoors.

4. Typical Application

✧ For testing

For testing the cell- phone, PND, car navigators, tracker, survey products, etc.

✧ For the purpose of GNSS signal covering

Car parks, lab, aviation manufacturing hangar, trade shows, Emergency-, safety vehicles, public transportation etc.

5. Equipment List With Standard Configuration

GNSSRK-M-RDV

- ✧ Amplifier: RGA30-DV ,1 ea;
- ✧ GNSS Antenna: S440,1 ea;
- ✧ Cable Assembly: RG8,30M, 1ea;
- ✧ Cable Assembly: XHY240,20M,1 ea;
- ✧ Cable Assembly: XHY240,5M,1 ea;
- ✧ Sending Antenna: GRA10,1 ea;
- ✧ Ligting-protector: 1 ea;
- ✧ Connector: NK-NK 1ea

GNSSRK-M-RDV4


- ✧ Amplifier: RGA30-DV ,1 ea;
- ✧ GNSS Antenna: S440,1 ea;
- ✧ Cable Assembly: RG8,30M, 1ea;
- ✧ Cable Assembly: XHY240,20M,4 ea;
- ✧ Cable Assembly: XHY240,5M,1 ea;
- ✧ Sending Antenna: GRA10,4 ea;
- ✧ Ligting-protector: 1 ea;
- ✧ Connector: NK-NK 1ea

GNSSRK-M-RDV8


- ✧ Amplifier: RGA30-DV ,1 ea;
- ✧ Receiving Antenna: S440,1 ea;
- ✧ Cable Assembly: RG8,30M, 1ea;
- ✧ Cable Assembly: XHY240,20M,8 ea;
- ✧ Cable Assembly: XHY240,5M,1 ea;
- ✧ Sending Antenna: GRA10,8 ea;
- ✧ Ligting-protector: 1 ea;
- ✧ Connector: NK-NK 1ea

RF coaxial cable assembly can make more choices according to the actual needs of customers, please contact our company's sales for support.


6. System connection diagram

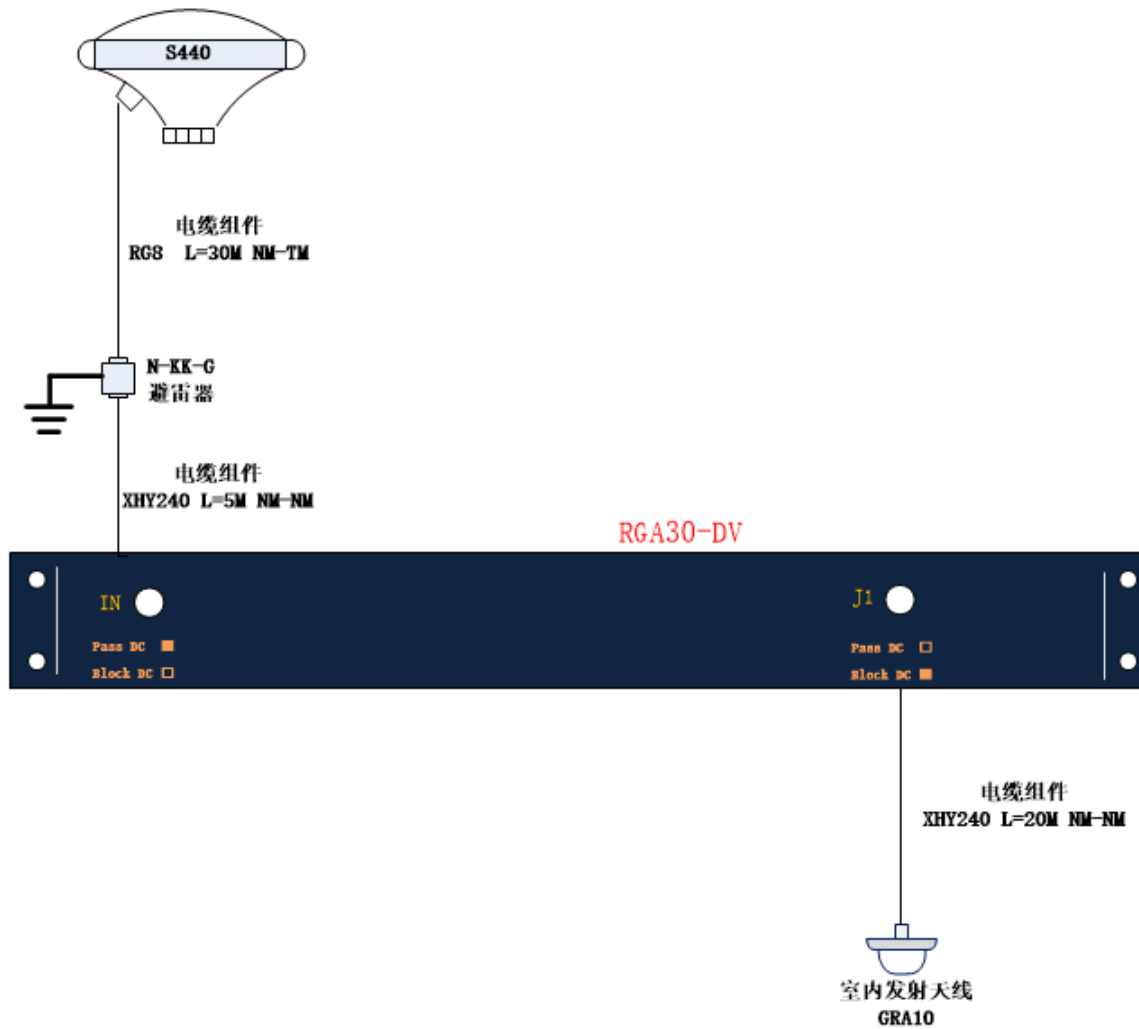

GNSSRK-M-RDV

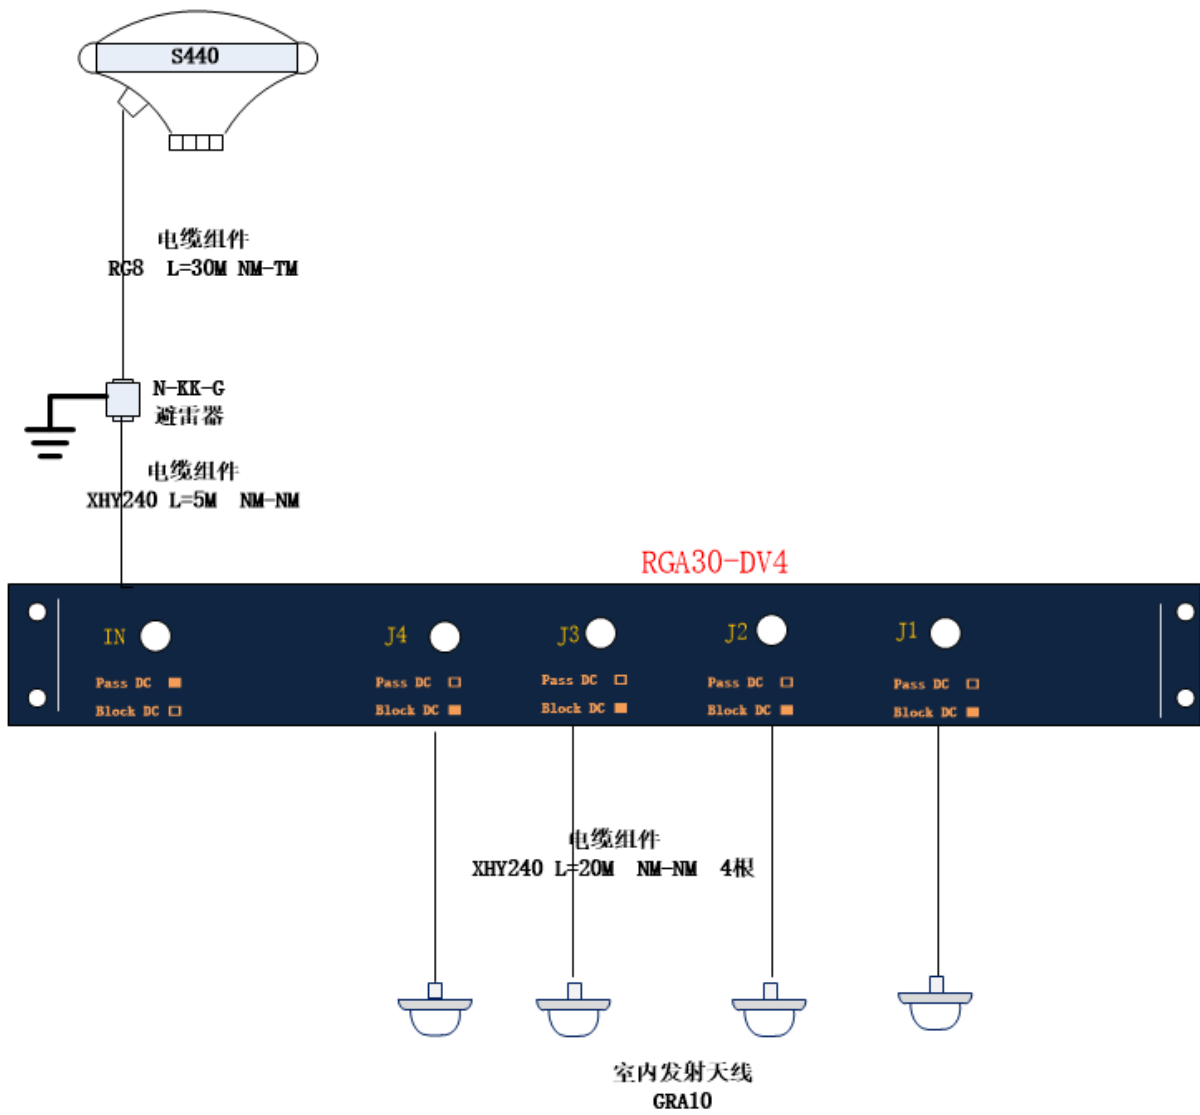

GNSSRK-M-RDV4

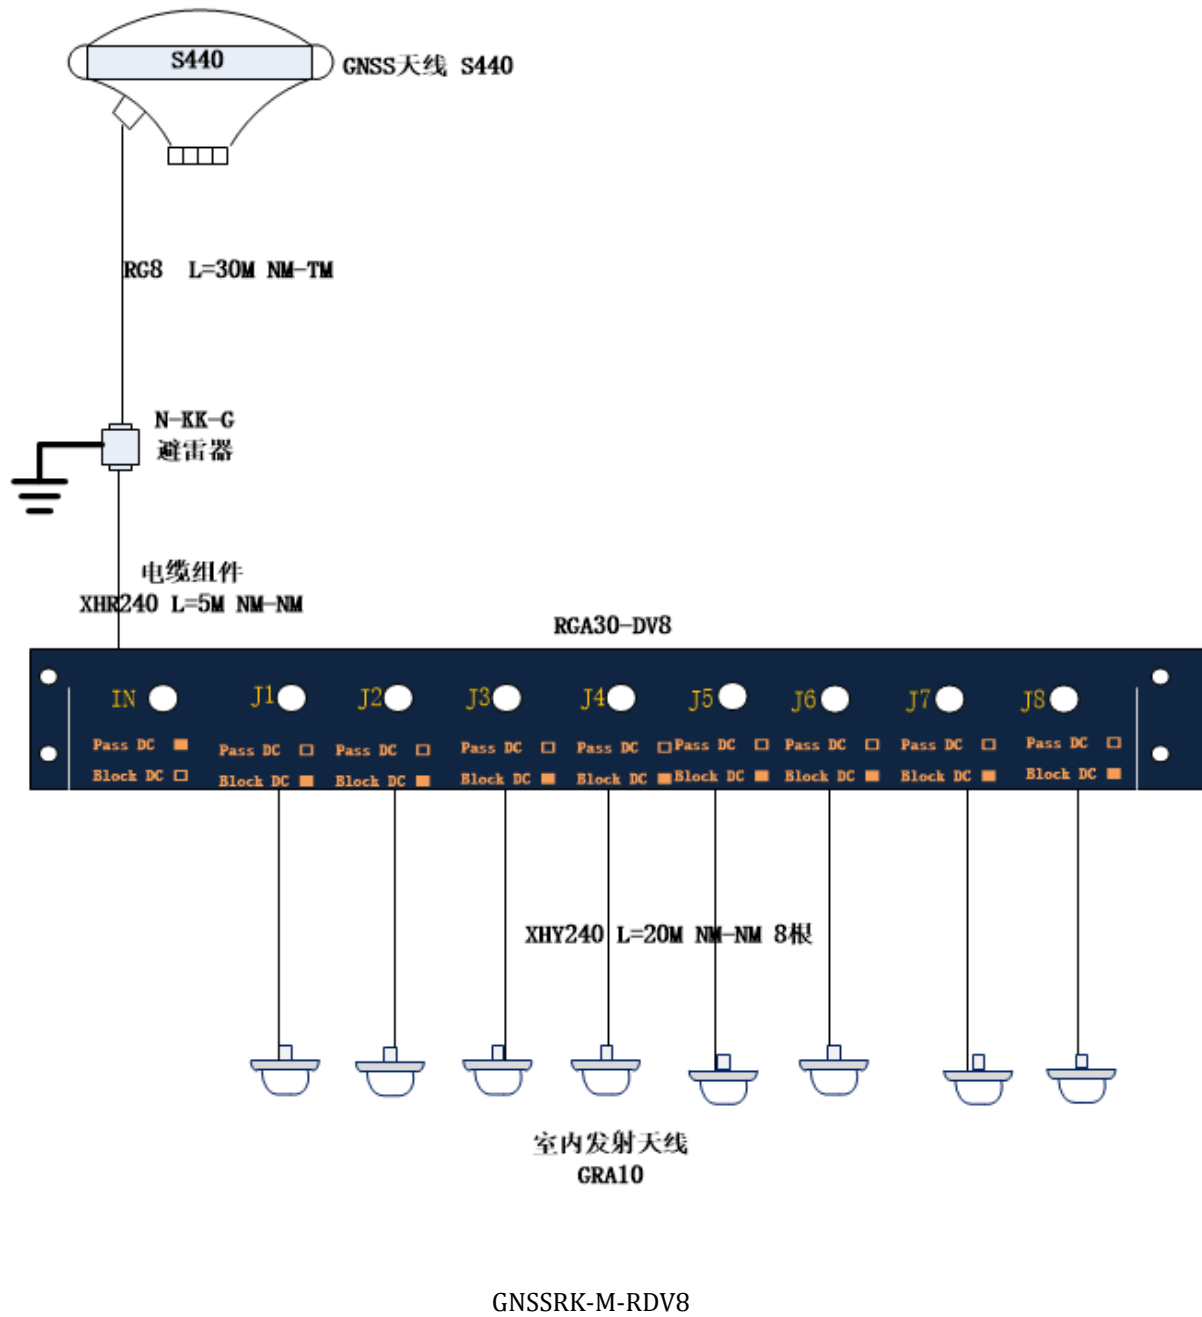

7. System Components

7.1 Digital Display Step Adjustable Amplifier RGA30-DV

7.1.1 Function:

Used to adjust system gain, 0-30 dB adjustable, you can control when needed. The input and output can be set PDC(Pass DC) or BDC(Block DC) state. The system power supply voltage is 220V AC.

①and②are RGA30-DV input and output.


③For power control switch. System power-on when allocated to upward, opposite, system stops working.

④ For the gain adjustment button, you can adjust the gain size, you can adjust the controller gain increase or decrease (0~30dB by 1dB step).

⑤ Set the PDC or BDC state::

- RGA30-DV : Set the IN and OUT, PDC(Pass DC) or BDC(Block DC)
- RGA30-DV4: Set the IN port only, the power-on state of the output port is factory set, PDC(Pass DC) or BDC(Block DC)
- RGA30-DV8: Set the IN port only, the power-on state of the output port is factory set, PDC(Pass DC) or BDC(Block DC).

⑥For the digital display, showing the current gain value of the amplifier, and the voltage of the input and output ports.

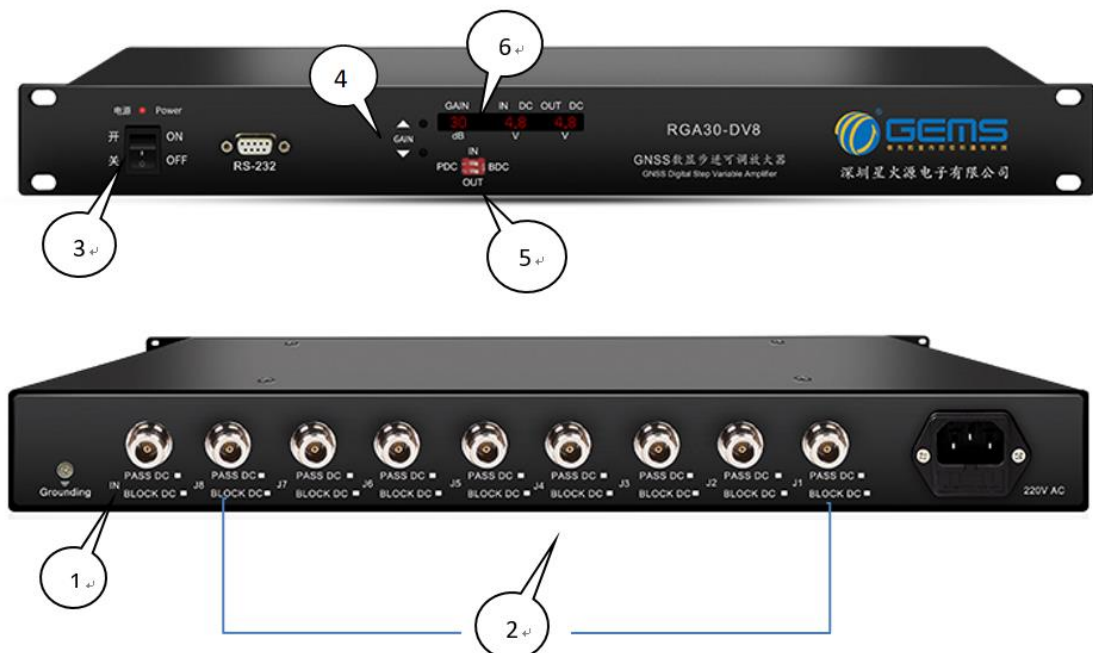

7.1.2 Specification

Parameter	Condition	Mini	Std.	Max	Unit
Frequency Range	In ,Out, 50Ω	1150		1650	MHz
Impedance	In ,Out		50		Ω
Gain	Digital Step Adjustable		0~30		dB
Input VSWR				2.0:1	-
Output VSWR				2.0:1	-
Noise Figure				3	dB
Gain Flatness				3	dB
Delay Flatness			1		ns
Power Input	220VAC	100	220	264	VAC
Current				250	mA
1dB Compression	RGA30-DV			-4	dBm
	RGA30-DV4			-29	
	RGA30-DV8			-29	
Max RF Power	RGA30-DV			0	dBm
	RGA30-DV4			-23	
	RGA30-DV8			-27	
Nun. Of input	GA30-DV,GA30-DV4,GA30-DV8		1		↑
Nun. Of Output	RGA30-DV		1		
	RGA30-DV4		4		
	RGA30-DV8		8		
Max RF Input	Maximum lossless RF input			0	dBm
Working Temperature		-40°		85°	

7.1.3 The amplifier Installation

Typical mounting scenarios for the RGA30-DV series are wall-mounted, or mounted in a standard 19-inch cabinet, or sometimes on a desk.



Mounted on the wall



On the table



Fits in a standard 19-inch cabinet

7.2 Antenna

7.2.1 Roof Antenna S440



Full GNSS Band: GPS/GLONASS/Beidou/Galileo/IRNSS/QZSS/SBAS/NAVIC/OmniStar

- ✧ GPS:L1,L2,L5;
- ✧ Glonass:G1,G2;
- ✧ Galileo:E1,E2,E5a,E5b;
- ✧ Beidou2:B1,B2,B3;
- ✧ IRNSS/QZSS/SBAS/NAVIC/OmniStar;

Electrical parameter:

Frequency [MHz]	1555~1623/1164~1288
Impedance	50Ω
Gain [dBi]	40±2(LNA included)
Polarization	right-hand circular polarized (RHCP)
Axial ratio [dB]	≤3
Elevation Coverage	360°
Input (VSWR)	≤2.0
Antenna element gain	5.5dBi

Low Noise Amplifier: Specifications:

Frequency [MHz]	1556~1623/1164~1288
Gain (dB)	40±2
Flatness in bandwidth (dB)	±2 dB
Noise Figure (dB)	≤2 dB
Output (VSWR)	≤2.0
Input (VSWR)	≤2.0
DC Voltage	DC 3.3—12V
DC Current	DC ≤45mA
Differential transmission delay	5ns

Mechanical characteristic:


Size [mm]	Ø165×68.8
Connecting	TNC-C-K
Operation Temperature [°C]	-40~+85
Reposition Temperature [°C]	-55~+85
Humidity [%]	95% non-condensin

7.2.2 GNSS antenna S440 installation

(1) Antenna spacing: >5M; transmitting and receiving antennas cannot be placed upside down except as specified in the manual.

(2) the antenna should be in the lightning arrester protection

(3) Antenna waterproof specification:

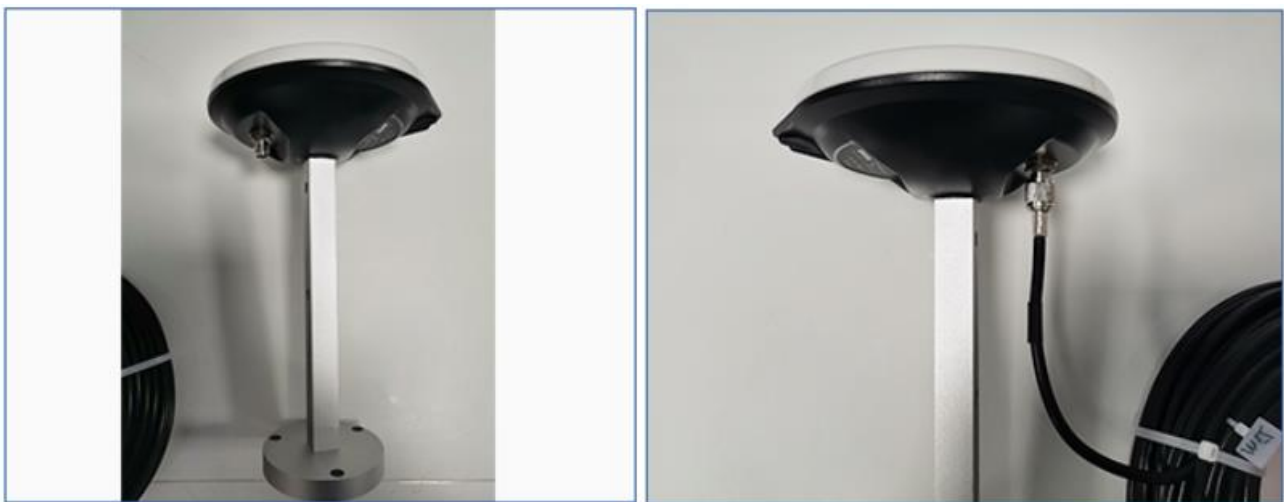

① The feeder joints need to be wound with waterproof self-adhesive tape, starting with the lower part of the joint connection and filling the low-lying part with the tape.

② Stretch the self-adhesive tape to twice its length during the winding process, and use 60cm long waterproof tape for each connector, requiring three layers of winding. The winding direction should be the same as the tightening direction of the feeder head to avoid loosening of the feeder head during the winding process.

③ layer by layer winding, and then reverse the direction of winding layer by layer, the upper layer covers the next layer of about one-third, so as to prevent rainwater leakage, and finally reverse the direction of winding layer by layer, winding a total of three layers, layer by layer winding waterproof tape, winding process do not cut off the tape. Tape winding length to exceed the feed head about 20 mm.



④ Installed antenna feeder joints, GPS antenna feeder joints, and other independent exposed cable joints, should be strictly in accordance with the "1 + 3 + 3" treatment (1 layer of insulation tape + 3 layers of waterproof tape + 3 layers of insulation tape wrapping) waterproof.

⑤ can also increase the clinker tube to cover the cable part, placing the cable joint part of the water.

4) Waterproof bend

① feeder line from outdoor into the room, if the feeder line is higher than the lower edge of the feeder window, must be made at the outdoor feeder window - waterproof bend, the lowest point of each feeder line after waterproof bend must be lower than the lower edge of the feeder window 10 cm

② If the feeder line is lower than the lower edge of the feeder window before entering the room, it is not necessary to make a waterproof bend.



7.4 Cable Assembly

7.4.1 RG8


RG8,30M is usually used for connecting Receiver antenna S440 and lightning-protector. You can calculate the length according to your actual environment, also 60m or 90 be selected.

The connectors are N Male-N Male.



RG Series MI

RG8

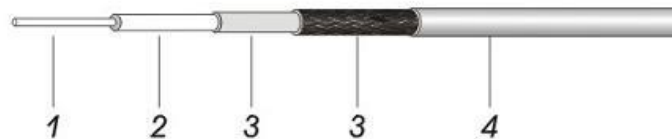

Construction Specification

	Material	Diameter(mm)
1. Inner Conductor	Bare Copper	2.74
2. Dielectric	Physical Foam Polyethylene	7.24
3. Outer Conductor	Bonded Aluminum Foil +Tinned Copper Braided	8.13
4. Jacket	PE	10.29

Electrical Characteristics

Capacitance(pF/m)	78.4
Impedance(ohm)	50
Velocity(%)	85
Shielding Effectiveness(>dB)	90
Max. Oper. Voltage(VMS)	4000
Operating Temp. (°C)	-40 to 80

Attenuation

Frequency(MHz)	Attenuation(≥ dB/100m)
30	2.2
50	2.9
150	5.0
220	6.1
450	8.9
900	12.8
1500	16.8
1800	18.6
2000	19.6
2500	22.2
5800	35.5


7.4.2 XHY240

The cable assembly XHY240 is the cable that connects the amplifier RGA30-XXX to the antenna GRA10.



低损耗电缆

XHY240

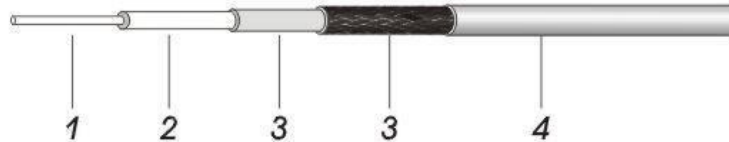

结构参数

项目	材料	直径(mm)
1. 内导体	裸铜线	1.42
2. 绝缘体	发泡聚乙烯	3.81
3. 外导体	自粘铝箔+ 镀锡铜线编织	4.52
4. 护套	PE 聚乙烯 (或其他材料)	6.10

电性能参数

电容(pF/m)	79.4
阻抗(ohm)	50
速率(%)	84
护套耐压(VRMS)	5000
峰值功率 (kw)	5.6
屏蔽衰减(>dB)	90
截止频率(GHz)	31

衰减和平均功率

频率 (MHz)	衰减 (>dB/100m)	平均功率 (kw)
30	4.4	1.49
50	5.7	1.15
150	9.9	0.66
220	12.0	0.54
450	17.3	0.38
900	24.8	0.26
1500	32.4	0.20
1800	35.6	0.18
2000	37.7	0.17
2500	42.4	0.15
5800	66.8	0.10

8 Typical faults and solutions

GNSS repeater/GPS booster/GPS signal amplifier GNSSRK-M-RDV fault location and remove:

First: To determine whether the RGA30-DV power supply connected, through the RGA30-DV digital display can be observed to lose whether there is voltage output, such as digital display shows a voltage of about 5V, indicating normal power supply, RGA30-DV work properly. Otherwise, check the power outlet for good contact.

Second: If the digital stepper is adjustable, the input port of the amplifier has a voltage of 5V, you need to check whether the fixing is steady between GRA10 and the cable.

Third: If the below two step were ok, please check the outdoor antenna S440 .You can, check the voltage between axis of the cable connector and the outer shielding layer to make sure it's 5V.If no voltage, the circuit has fault, please contact our technical support. If 5V,the antenna S440 can be suspected.(In fact, this case hasn't appear in our engineering projects.

Contact us: +86-755-29644311 Email: Sales@gemsnav.com

9 Frequency Reference Table

Global/Compass Navigation Satellite Systems(GNSS/CNSS)	5					2					6/3				6				1															
Frequency (MHz)	1164	1176	1188	1192	1207	1215	1219	1227	1239	1245	1252	1259	1266	1268	1278	1290	1535	1540	1545	1550	1558	1558	1561	1563	1575	1587	1592	1602	1609	1616	2491			
GPS(USA) L1,L2,L2C,L5	L5+/-12					L2/L2C+/-12										L6+/-5							L1+/-12											
Glonass(Russia) G1,G2											G2+/-7																							
Galileo(European) L1,E1,E2,E5(E5a,E5b),E6	E5+/-15													E6+/-12							L6+/-5			E2		L1+/-17			E1					
Compass (Beidou 2,China)			B2+/-10											B3+/-10										B1+/-2										
Beidou 1 (China,Tx(LHCP)/Rx(RHCP))																															L	S		
IRNSS (India)			L5+/-15																					L1+/-12							S+/-15			
OmniStar																	O+/-14---->																	